


VESDA VLF

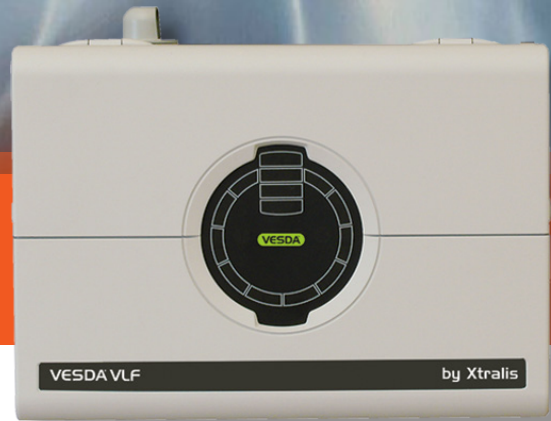

The VESDA VLF-250 detector is a very early warning smoke detector designed to protect small, business-critical environments of less than 250 m² (2,690 sq. ft.).

The detector works by continually drawing air into sampling holes in a pipe network. The air is filtered and passed into a detection chamber where light scattering technology detects the presence of very small amounts of smoke. Detector status information is communicated on the detector display and via relays or optional interface cards.

Out-of-the-box operation

The VLF can be installed and commissioned out-of-the-box without the need for a special interface or software programming tools.

In operation, the unique Smoke Dial™ display provides the user with an instant understanding of a smoke event, even from a distance. Should a fault occur, the user simply opens the field service door and activates the Instant Fault Finder feature to determine the specific fault condition. This information can then be passed onto their fire service company, ensuring that service technicians arrive onsite fully prepared.

Ultrasonic Flow Sensing

The patent-pending Ultrasonic Flow Sensing used in the VLF provides a direct reading of the sampling pipe flow rate. The system is immune to air temperature and pressure changes and is unaffected by contamination. The VLF is the first air sampling smoke detector to use ultrasonic flow sensing.

Regional approvals listings and regulatory compliance vary between VESDA product models. Refer to www.xtralis.com for the latest product approvals matrix.

Features

- Out-of-the-Box Installation and Commissioning
- Ultrasonic Airflow Sensing
- Laser-Based Absolute Smoke Detection
- Pre-engineered pipe network designs
- Programmable Alarm Thresholds
- Clean air barrier optics protection
- Instant Recognition Display
- Instant Fault Finder™
- AutoLearn™ Smoke
- AutoLearn™ Flow
- Field Service Access Door
- Multiple Event Logging in separate logs
- Event log – up to 18000 events
- Offline/online configuration capability
- Up to 250 m² (2,690 sq. ft.) coverage*

Listings/Approvals

- UL
- ULC
- CCC
- FM
- ActivFire
- CE
- LPCB
- VdS
- VNIPO
- NF
- EN 54-20
- Class A (12 holes / 0.12% obs/m)
- Class B (12 holes / 0.35% obs/m)
- Class C (12 holes / 0.80% obs/m)

Classification of any configuration is determined using ASPIRE.

Alla uppgifter i detta produktdatablad ska betraktas som normativa värden som härrör från tester samt våra samlade kunskaper och erfarenheter av produkten. Informationen ska inte användas för att läggas till grund för eller för att verifiera andra tester eller system. Firesafe tar inget ansvar för felaktigt användande av denna produkt. Användaren är ansvarig för att se till att den senaste versionen av detta dokument används. Informationen kan kontrolleras på vår hemsida www.firesafe.se. Detta dokument får inte kopieras utan skriftligt tillstånd från Firesafe.
 Firesafe Sverige AB / Västberga Allé 36 C / 126 11 Hägersten / 010 - 155 09 00 / info@firesafe.se

Specifications

Input Power	
Voltage:	24V DC Nominal (18-30 V DC)
Current @ 24 VDC:	220 mA nominal, 295 mA in alarm
Dimensions (W x H x D)	256 mm x 183 mm x 92 mm (101/16 in x 71/5 in x 32/3 in)
Weight	Approx. 2 kg (4.4 lbs)
IP Rating	IP30
Mounting	Upright, inverted or horizontal
Operating Conditions*	
Ambient:	0°C to 39°C (32°F to 103°F)*
Tested to (EN54-20):	- 10°C to 55°C (14°F to 131°F)
Sampled Air**:	- 20°C to 60°C (-4°F to 140°F)
Humidity:	5% to 95% RH, non-condensing
Sampling Network	
Maximum pipe lengths:	1 x 25 m (80 ft) (Max. 12 holes) 2 x 15 m (50 ft) per branch (Max. 6 holes per branch)
Sampling Hole Options:	Pre-Engineered Option or Maximum Pipe length in accordance with Pipe Modelling Design Tool (ASPIRE™)

Air Inlet Pipe

Accepts both metric and American standard pipe sizes
Metric: 25 mm (1.05 in.) American Pipe: IPS 21 mm (¾ in.)

Area Coverage

Up to 250 m² (2,690 sq. ft.) depending on local codes and standards

Relay Outputs

3 changeover relays (Fire 1, Action, Fault), Contacts rated 2A @ 30 VDC (max). NO/NC Contacts

Cable Access

3 x 25 mm (1.05 in.) cable entries (1 rear entry, 2 top entry)

Cable Termination

Screw Terminals 0.2-2.5 mm² (30-12 AWG)

Interfaces

Shown in Terminal Block Connections diagram, to right, plus an RS232 Programming Port. General Purpose Input (GPI) interface offers: Reset, Disable, Standby, Alarm set 1, Alarm set 2 and External Input functions.

Alarm Threshold Setting Range

Alert, Action	0.025 - 2.00% obs/m (0.008 - 0.625% obs/ft)
Fire 1, Fire 2	0.025 - 20.00% obs/m (0.008 - 6.25% obs/ft)
Individual Alarm Delays	0 - 60 seconds
Two Alarm Threshold Settings	Either time or GPI based

Display

- 4 Alarm State Indicators
- Smoke Level Indicator
- Reset, Disable and Test Controls
- Fault and Disabled Indicators
- Instant Fault Finder
- Smoke and Flow AutoLearn Controls

Event Log

Up to 18000 events, time and date stamped in separate, non-volatile, logs for: Smoke Level, Flow Level, Detector Status and Faults

AutoLearn Smoke & Flow

- Automatically set acceptable alarm thresholds for both smoke and flow levels
- Minimum 15 minutes, maximum 15 days (default 14 days)
- During AutoLearn thresholds are NOT changed from pre-set values

Warranty Period

2 years

Ordering Information:

VLF-250-00	VESDA VLF. European language set. English display labels
VLF-250-01	VESDA VLF. European language set. International display labels
VLF-250-02	VESDA VLF. English + Asian language set. International display labels
VLF-250-04	VESDA VLF. English + Russian language set. International display labels
VLF-250-05	VESDA VLF. English + Eastern Euro language set. International display labels
VIC-010	VESDAnet Interface Card, VIC-020 Multifunction Control Card (MCC)
VIC-030	Multifunction Control Card (MCC) with Monitored Powered Output (MPO)
VSP-005	Filter Cartridge
VSP-722	Aspirator for VESDA VLF-250

Display

The display provided to the user includes a Smoke Dial™ and alarm and status indicators.



When the field service access door is open, the user has access to the RESET, DISABLE, Fire Test, AutoLearn and Instant Fault Finder functions. When the Instant Fault Finder function is activated, the Smoke Dial™ converts to a fault indicator, with the dial segment numbers corresponding to the faults listed below.

Legend of fault indicators:

- | | |
|-------------|---------------------|
| 1 Filter | 6 External Device/ |
| 2 Aspirator | 7 Interface card |
| 3 High flow | 8 Field wiring |
| 4 Low flow | 9 AutoLearn Fail |
| 5 n/a | 10 Detector failure |

Terminal Block Connections:

	1 GPI	
	2 GPI	
	3 Display TX	
	4 Display RX	
	5 Display Common Ground	
	6 Display Power -	
	7 Display Power +	
	8 Power Return 0 VDC	From power supply unit
	9 Power In 24 VDC	
	10 Power Return 0 VDC	To next detector (if more than 1 detector per Power Supply Unit)
	11 Power Out 24 VDC	
	12 NC	
	13 Common	Fault relay
	14 NO	
	15 NC	
	16 Common	Action relay
	17 NO	
	18 N	
	19 Common	Fire 1 relay
	20 NO	

Approvals Compliance

Please refer to the Product Guide for details regarding compliant design, installation and commissioning.

- * Product UL listed for use from 0°C to 38°C (32°F to 100°F).
- ** Sampled Air temperature shall reach Ambient Detector temperature upon entry into Detector. Refer to Xtralis Design Guides & Application Notes for sampled air pre-conditioning.



Alla uppgifter i detta produktdatablad ska betraktas som normativa värden som härrör från tester samt våra samlade kunskaper och erfarenheter av produkten. Informationen ska inte användas för att läggas till grund för eller för att verifiera andra tester eller system. Firesafe tar inget ansvar för felaktigt användande av denna produkt. Användaren är ansvarig för att se till att den senaste versionen av detta dokument används. Informationen kan kontrolleras på vår hemsida www.firesafe.se. Detta dokument får inte kopieras utan skriftligt tillstånd från Firesafe. Firesafe Sverige AB / Västberga Allé 36 C / 126 11 Stockholm / 010 - 155 09 00 / info@firesafe.se